

# ATN NVG-7

## NIGHT VISION GOGGLES



NVG7 OPERATOR'S MANUAL (REV. 1, AUGUST 2010)

## *operator's manual*

**Important Export Restrictions!** Commodities, products, technologies and services contained in this manual are subject to one or more of the export control laws and regulations of the U.S. Government and they fall under the control jurisdiction of either the US Department of State or the US BIS-Department of Commerce. It is unlawful and strictly prohibited to export, or attempt to export or otherwise transfer or sell any hardware or technical data or furnish any service to any foreign person, whether abroad or in the United States, for which a license or written approval of the U.S. Government is required, without first obtaining the required license or written approval from the Department of the U.S. Government having jurisdiction. Diversion contrary to U.S. law is prohibited.



**AMERICAN  
TECHNOLOGIES  
NETWORK  
CORP.**

**Register your product warranty online at  
[www.atncorp.com/warranty](http://www.atncorp.com/warranty)**

The information in this manual is furnished for information use only, is subject to change without notice, cannot be construed as a commitment by ATN Corp. ATN Corp. assumes no responsibility or liability for any errors or inaccuracies that may appear in this book.  
© 2010 ATN Corp. All right reserved.

# SAFETY SUMMARY

---

**STUDY CAREFULLY THIS MANUAL BEFORE  
TURNING ON AND OPERATING THIS PRODUCT.**

## **CAUTIONS**

NVG-7 night vision units are precision optico-electronic instruments and requires careful handling. To provide safe use of the goggles the following instructions should be observed:

- Do not dismantle the unit.
- Keep the unit clean; protect it from moisture, sharp temperature drops and shocks.
- Be careful not to touch the glass surfaces. If you put finger-prints on, or contaminate the glass surfaces, use only clean and soft materials to clean it.
- Protect the unit from excessive lighting. Do not turn the goggles on in daylight with the front lens cap off. Do not point the goggles at the bright light source (a fire, car headlights, lanterns, street lamps, room lights, etc.).
- Do not test the device in daylight conditions even with the daylight filter/lens cap on for more than ten (10) minutes.
- Do not leave the unit in on position during stops in operation.
- Remove the battery from the unit when storing for periods exceeding 3 days. Failure to do so may damage unit.

## **CAUTION:**

**THIS PRODUCT CONTAINS NATURAL RUBBER LATEX  
WHICH MAY CAUSE ALLERGIC REACTIONS.**

## **EQUIPMENT LIMITATIONS**

To avoid physical and equipment damage when using the ATN NVG-7, carefully read and understand the following equipment limitations.

- The equipment requires some night light (moonlight, starlight, etc.) to operate. The level of equipment performance depends upon the level of light.
- Night light reduces by passing through the clouds, while operating under trees, at building shadows, etc.
- The equipment is less effective when viewing into shadows and other darkened areas.
- The equipment is less effective when viewing through the rain, fog, sleet, snow or smoke.
- The equipment will not “see” through the dense smoke.
- Has protection system, which cuts off the image intensifier when ambient light level exceeds the limit of 40 lux during a 10 seconds period.
- Under starlight conditions low contrast environments (such as snowcovered territory, sandy deserts, large bodies of water or grassy hills) degrade visibility thereby disguising or masking changes in terrain.
- Under too low-light conditions the goggles loses some of the resolution that it has under full moon.

# TABLE OF CONTENTS

---

pg.

<b>SAFETY SUMMARY</b>	<b>a</b>
<b>SECTION I. INTRODUCTION</b>	<b>1-1</b>
<b>1.1. General</b>	<b>1-2</b>
1.1.1. Goggles	1-2
1.1.2. Reports	1-2
1.1.3. Storage	1-2
1.1.4. Warranty	1-2
<b>1.2. Description and Data</b>	<b>1-5</b>
1.2.1. Description	1-5
1.2.2. NVG7 Standard Components	1-8
1.2.3. NVG7 Optional Components	1-9
<b>SECTION II. OPERATING INSTRUCTIONS</b>	<b>2-1</b>
<b>2.1. Installation Procedures</b>	<b>2-2</b>
2.1.1. Battery Installation	2-2
2.1.2. Flip-Up Head Mount Installation	2-3
2.1.3. Helmet Mount Installation	2-5
2.1.4. 3x Lens Installation	2-6
2.1.5. 5x Lens Installation	2-6
2.1.6. 8x Lens Installation	2-7
2.1.7. IR-450 Installation	2-8
2.1.8. Adapter to Mil-Spec Head/Helmet Mount	2-9
<b>2.2. Operating Procedures</b>	<b>2-11</b>
2.2.1. Controls and Indicators	2-11
2.2.2. Preparation for Operation	2-12
2.2.3. Operation in the Dark Condition	2-13
2.2.4. Focusing	2-13
2.2.5. IR Illuminator Operation	2-14
2.2.6. Shut-down Operation	2-16

<b>SECTION III. OPERATIONAL DEFECTS</b>	<b>3-1</b>
<b>3.1. Zeroing Operational Defects</b>	<b>3-2</b>
3.1.1. Shading	3-2
3.1.2. Edge Glow	3-3
3.1.3. Flashing, Flickering, or Intermittent Operation	3-3
3.1.4. Cosmetic Blemishes	3-3
<b>SECTION IV. MAINTENANCE INSTRUCTIONS</b>	<b>4-1</b>
<b>4.1. Preventive Maintenance Checks and Services (PMCS)</b>	<b>4-2</b>
4.1.1. Purpose of PMCS	4-2
4.1.2. Frequency of Performing PMCS	4-2
<b>4.2. Troubleshooting Procedures</b>	<b>4-4</b>
<b>4.3. Maintenance Procedures</b>	<b>4-6</b>
4.3.1. NVG7 Maintenance	4-6
4.3.2. Cleaning Procedures	4-7
<b>4.4. Head Mount Maintenance</b>	<b>4-7</b>
4.4.1. Removal and Installation of Browpad	4-7
4.4.2. Removal and Installation of Chinstrap	4-7
4.4.3. Removal and Installation of Chin Cup	4-8
4.4.4. Preparing for Extended Storage	4-8
<b>Appendix A. Estimation of Ambient Illumination Level</b>	<b>A-1</b>
<b>Appendix B. Spare Parts List</b>	<b>B-1</b>
<b>Appendix C. Removal and Installation of Image Intensifier</b>	<b>C-1</b>
<b>For Technical Information</b>	<b>INFO-1</b>

# **SECTION I**

## **INTRODUCTION**

## **1.1 GENERAL INFORMATION**

---

### **1.1.1. GOGGLES**

This manual contains instructions for use in operating and maintaining the ATN NVG-7. Throughout this manual, the ATN NVG-7 will be referred to as the goggles or the NVG-7.

### **1.1.2. REPORTS**

Reports from the user on recommendations for improvements are encouraged. Send reports to the address below.

American Technologies Network Corp.  
1341 San Mateo Avenue  
South San Francisco, CA 94080  
(800) 910-2862  
(650) 989-5100  
(650) 875-0129 fax  
[www.atncorp.com](http://www.atncorp.com)  
[info@atncorp.com](mailto:info@atncorp.com)

### **1.1.3. STORAGE**

Storage of the NVG7 should be done in the factory packing and after a thorough PMCS as outlined in Chapter IV of this manual. This will ensure the goggles remains in mission ready condition during storage. Battery should be stored separately from the goggles.

The NVG7 should not be placed on the floor, in any area exposed to high temperatures or direct sunlight. Presence of acid and alkaline vapour, as well as of other aggressive admixtures in the air is unacceptable.

## 1.1.4. WARRANTY

### 2 YEAR PRODUCT WARRANTY

This product is guaranteed to be free from manufacturing defects in material and workmanship under normal use for a period of 2 (two) years from the date of purchase. In the event a defect that is covered by the foregoing warranty occurs during the applicable period stated above, ATN, at its option, will either repair or replace the product, and such action on the part of ATN shall be the full extent of ATN's liability, and the Customer's sole and exclusive remedy. This warranty does not cover a product (a) used in other than its normal and customary manner; (b) subjected to misuse; (c) subjected to alterations, modifications or repairs by the Customer or by any party other than ATN without prior written consent of ATN; (d) special order or "close-out" merchandise or merchandise sold "as-is" by either ATN or the ATN dealer; or (e) merchandise that has been discontinued by the manufacturer and either parts or replacement units are not available due to reasons beyond the control of ATN. ATN shall not be responsible for any defects or damage that in ATN's opinion is a result from the mishandling, abuse, misuse, improper storage or improper operation, including use in conjunction with equipment which is electrically or mechanically incompatible with or of inferior quality to the product, as well as failure to maintain the environmental conditions specified by the manufacturer. **CUSTOMER IS HEREBY NOTIFIED THAT OPERATION OF THE EQUIPMENT DURING DAYLIGHT HOURS OR UNDER ANY EXCESSIVE LIGHT CONDITIONS MAY PERMANENTLY DAMAGE THE INTERNAL COMPONENTS OF THE UNIT AND SAID DAMAGE WILL NOT BE COVERED UNDER THIS WARRANTY.** This warranty is extended only to the original purchaser. Any breach of this warranty shall be waived unless the customer notifies ATN at the address noted below within the applicable warranty period.

The customer understands and agrees that except for the foregoing warranty, no other warranties written or oral, statutory, expressed or implied, including any implied warranty of merchantability or fitness for a particular purpose, shall apply to the product. All such implied warranties are hereby and expressly disclaimed.

### LIMITATION OF LIABILITY

ATN will not be liable for any claims, actions, suits, proceedings, costs, expenses, damages or liabilities arising out of the use of this product. Operation and use of the product are the sole responsibility of the Customer. ATN's sole undertaking is limited to providing the products and services outlined herein in accordance with the terms and conditions of this Agreement. The provision of products sold and services performed by ATN to the Customer shall not be interpreted, construed, or regarded, either expressly or implied, as being for the benefit of or creating any obligation toward any third party of legal entity outside ATN and the Customer; ATN's obligations under this Agreement extend solely to the Customer.

ATN's liability hereunder for damages, regardless of the form or action, shall not exceed the fees or other charges paid to ATN by the customer or customer's dealer. ATN shall not, in any event, be liable for special, indirect, incidental, or consequential damages, including, but not limited to, lost income, lost revenue, or lost profit, whether such damages were foreseeable or not at the time of purchase, and whether or not such damages arise out of a breach of warranty, a breach of agreement, negligence, strict liability or any other theory of liability.

## **PRODUCT WARRANTY REGISTRATION**

In order to validate the warranty on your product, ATN must receive a completed Product Warranty Registration Card for each unit or complete warranty registration on our website at [www.atncorp.com](http://www.atncorp.com). Please complete the included form and immediately mail it to our Service Center: ATN Corporation, 1341 San Mateo Avenue, South San Francisco, CA 94080.

## **OBTAINING WARRANTY SERVICE**

To obtain warranty service on your unit, End-user must notify ATN service department by calling 800-910-2862 or 650-989-5100 or via e-mail [service@atncorp.com](mailto:service@atncorp.com) to receive a Return Merchandise Authorization number (RMA).

When returning please take or send the product, postage paid, with a copy of your sales receipt to our service center, ATN Corporation at the address noted above. All merchandise must be fully insured with the correct postage; ATN will not be responsible for improper postage or, missing or damaged merchandise during shipment.

When sending product back, please clearly mark the RMA# on the outside of the shipping box. Please include a letter that indicates your RMA#, Name, Return Address, reason for service return, Contact information such as valid telephone numbers and/or e-mail address and proof of purchases that will help us to establish the valid start date of the warranty. Product merchandise returns that do not have an RMA listed may be refused or a significant delay in processing may occur.

Estimated Warranty service time is 10-20 business days. End-user/customer is responsible for postage to ATN for warranty service. ATN will cover return postage/shipping to continental USA end-users/customers after warranty repair only if product is covered by aforementioned warranty. ATN will return product after warranty service by domestic ground service and/or domestic mail. Any other requested, required or international shipping method the postage/shipping fee will be the responsibility of the end-user/customer.

## 1.2. DESCRIPTION AND DATA

---

### 1.2.1. DESCRIPTION

#### A. Purpose

The NVG-7 is a hand-held, head mounted or helmet mounted night vision system that enables walking, short-range surveillance, map reading, vehicle maintenance, and administering first aid in both moonlight and starlight. Each unit allows for vertical adjustment (by using head straps), fore-and-aft adjustment, objective lens focus, and eyepiece focus. The device is also equipped with an built-in infrared light-emitting source.



FIGURE 1-1. ATN NVG-7

#### B. Features

The ATN NVG-7 has the following important features:

- High Quality image intensifier tube
- Super fast lens system provides the user with a clear and sharp image
- Dual eye viewing system for long viewing sessions
- Built-in Infra Red illuminator lets you see even in total darkness
- Interchangeable lenses for different magnification
- Head or helmet mounted for hands free use
- Rugged and versatile design
- Easy to use digital controls

### **C. Principle of Operation**

The NVG-7 Night Vision goggles utilize the principle of intensification of the residual light which is reflected from the surrounding objects.

The device consists of the objective lens assembly, eyepiece and the body. The body contains a image intensifier tube assembly with an integrated high voltage power source and the battery housing.

Objective lens protective cover is intended to protect the objective lens from dust and scratches. It also will act as a daylight filter, allowing you to test the scope in daylight or other bright light situations. The pinhole in the center of the protective cover allows the user to check the operation ability of the device in daylight conditions.

Built-in IR Illuminator makes it possible to observe the objects when the goggles work in the conditions of low light or total darkness.

The eyepiece incorporates red LED indicator serves as an IR Illuminator Indicator and an Battery Low Indicator at a time.

### **D. Automatic Brightness Control System**

The device has a built in Automatic Brightness Control. Even under unsteady brightness conditions, this system always keeps the image intensifier tube brightness level constant.

#### **NOTE**

**Automatic Brightness Control System do not protect a device from damage by bright light sources (a fire, headlights of the automobile, lanterns, etc.). Do not point the device at a bright light source.**

### **E. IR Illuminator Indicator**

Built-in IR illuminator of NVG-7 is on when the red LED indicator in field of view of goggles light becomes stable.

### **F. Low Battery Indicator**

If the red indicator in the FOV starts flickering, it means there might be about 20% of battery charge left. It is time to change your battery.

**TABLE 1-1. SPECIFICATION**

<b>SYSTEM RESOLUTION SUBJECT TO TUBE RESOLUTION:</b>	
36 to 44 lp/mm	0.38 mrad/lp
45 to 54 lp/mm	0.30 mrad/lp
55 to 64 lp/mm	0.25 mrad/lp
Over 65 lp/mm	0.21 mrad/lp
<b>MECHANICAL DATA:</b>	
Dimensions (Length x Width x Height)	6.3" x 2.5" x 4" / 160 x 60 x 102 mm
Weight	1.1 lb/0.5 kg
<b>ELECTRICAL DATA:</b>	
Battery	One AA (1.5 V) or CR123A (3 V)
Cell Life at 20 °C: AA Alkaline Battery 123A Lithium Battery	30 hours 60 hours
<b>OPTICAL DATA:</b>	
Magnification	1X (3X, 5X, 8X optional)
Objective Lens Focal Length	26 mm
Objective Lens F/number	1:1.2
Field of View	40°
Diopter Adjustment	±5
Focus Range	0.25 m to infinity
Interpupillary Distance	58 - 72 mm
<b>ENVIRONMENTAL DATA:</b>	
Operating Temperature	-40 to +50 °C
Storage Temperature	-50 to +70 °C
Illumination Required	Natural night illumination (overcast starlight to moonlight)

## 1.2.2. NVG7 STANDARD COMPONENTS

The NVG-7 standard components are shown in Figure 1-3 and presented in Table 1-6.



FIGURE 1-3. NVG-7 STANDARD COMPONENTS

TABLE 1-2. NVG-7 STANDARD COMPONENTS

ITEM	DESCRIPTION	QTY
1	ATN NVG-7	1
2	Objective Lens Cap	1
3	Eye Cups	1
4	CR123A, Lithium Battery	1
5	Battery Adapter	1
6	Flip-up Goggle Kit	1
7	Soft Bag	1
8	Operating Manual	1

### 1) ATN NVG-7 Goggles

The NVG-7 night vision device with 1x magnification.

### 2) Objective Lens Cap

A cap used to protect the lens and for testing the unit in the daylight.

### 3) Eye Cups

A rubber cups used to protect eyepiece and for operator comfort.

### 4) CR123A, Lithium Battery

CR123A lithium batteries used to power the unit.

### 5) Battery Adapter

Allows the NVG-7 to accept the CR123A Lithium and AA size batteries used to power the unit.

## 6) Flip-up Goggle-Kit

Adjustable universal assembly that secures the ATN NVG-7 to the operator's head providing hands-free operation.

## 7) Soft bag

A protective bag used to store NVG-7 and accessories.

## 8) Operating Manual

Provides equipment description, use of operator controls and preventative maintenance checks and service.

### 1.2.3. NVG-7 OPTIONAL COMPONENTS

The NVG-7 optional components are shown in Figure 1-4 and presented in Table 1-3.



FIGURE 1-4. NVG-7 OPTIONAL COMPONENTS


TABLE 1-3. NVG-7 OPTIONAL COMPONENTS

ITEM	DESCRIPTION	QTY
1	IR-450 IR illuminator kit	1
2	3X Lens	1
3	5X Lens	1
4	8X Lens	1

**TABLE 1-3. NVG-7 OPTIONAL COMPONENTS**

ITEM	DESCRIPTION	QTY
5	NVB5X Kit	1
6	NVB8X Kit	1
7	Universal Helmet Mount Kit	1
8	Adapter to Mil-spec head/helmet mount	1
9	MICH Helmet Mount Kit	1
10	PAGST Helmet Mount Kit	1

IR Illuminator Kit is shown in Figure 1-5 and listed in Table 1-4.

 

**FIGURE 1-5. IR450 IR ILLUMINATOR KIT**

**TABLE 1-4. IR450 KIT**

ITEM	DESCRIPTION	QTY
1	IR450-B4 Illuminator	1
2	CR123A type battery	1
3	1.5 mm Allen Key	1
4	IR450 Wrench	1

NVB5X Kit is shown in Figure 1-6 and listed in Table 1-5.



**FIGURE 1-6. NVB5X KIT**

**TABLE 1-5. NVB5X KIT**

ITEM	DESCRIPTION	QTY
1	5X Lens	1
2	IR450-B4 Illuminator	1
3	CR123A type battery	1
4	1.5 mm Allen Key	1
5	IR450 Wrench	1
6	Mil-spec hard case	1

NVB8X Kit is shown in Figure 1-5 and listed in Table 1-6.



**FIGURE 1-7. NVB8X KIT**

**TABLE 1-6. NVB8X KIT**

ITEM	DESCRIPTION	QTY
1	8X Lens	1
2	IR450-B4 Illuminator	1
3	CR123A type battery	1
4	1.5 mm Allen Key	1
5	IR450 Wrench	1
6	Mil-spec hard case	1

**1) IR-450 Kit**

A 450 mW infrared illuminator is powerful for long range night vision in the total darkness.

**2) 3X Lens**

Mountable on the ATN NVG-7 to enhance range performance.

- 3) **5X Lens**  
Mountable on the ATN NVG-7 to enhance range performance.
- 4) **8X Lens**  
Mountable on the ATN NVG-7 to enhance range performance.
- 5) **NVB 5X Kit**  
Allows ATN NVG-7 to enhance range performance in total darkness with 5x magnification and 450mW long-range IR Illuminator.
- 6) **NVB 8X Kit**  
Allows ATN NVG-7 to enhance range performance in total darkness with 8x magnification and 450mW long-range IR Illuminator.
- 7) **Universal Helmet Mount Kit**  
Provides mount interface for the ATN NVG-7 to a range of ballistic helmets.
- 8) **MICH Helmet Mount Kit**  
This kit contain MICH helmet mount and adapter which allows to attach the NVG-7 to the MICH helmet mount.
- 9) **PAGST Helmet Mount Kit**  
This kit contain PAGST helmet mount and adapter which allows to attach the NVG-7 to the PAGST helmet mount.
- 10) **Adapter to Mil-spec head/helmet mount**  
This item allows to attach the NVG-7 to the Mil-spec head/helmet mount.

## **SECTION II**

# **OPERATING INSTRUCTIONS**

## 2.1. INSTALLATION PROCEDURES

---

### 2.1.1. BATTERY INSTALLATION

#### A. Install standard CR123A batteries as follows:

1. Unscrew the battery cap.
2. Insert CR123 battery, observing the polarity as indicated.
3. Replace the battery cap and screw cap hand tight.

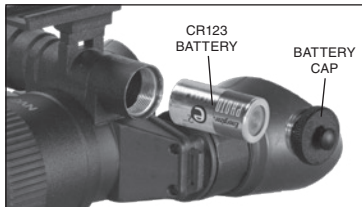


FIGURE 2-1. CR123A TYPE BATTERY INSTALLATION

#### B. Install AA batteries as follows:

1. Unscrew the battery cap.
2. Screw the AA battery adapter in to the battery housing.
3. Insert the AA battery, observing the polarity as indicated.
4. Replace the battery cap and screw cap hand tight.

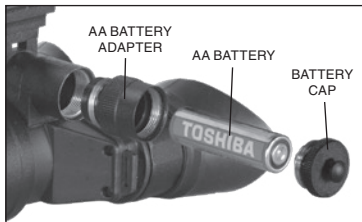


FIGURE 2-2. AA TYPE BATTERY INSTALLATION

## 2.1.2. FLIP-UP HEAD MOUNT INSTALLATION

### A. Fitting the head mount

Adjust the head mount first before attaching the NV unit to it.

1. Loosen all the straps and place the head mount on your head.
2. Fit the head mount to your head size. Tighten the back straps and fixate it with Velcro tape.
3. Then secure the top straps. This one is rather tight so you might need to remove it from your head, when you are adjusting the straps.
4. And last you will need to tighten the chin strap.

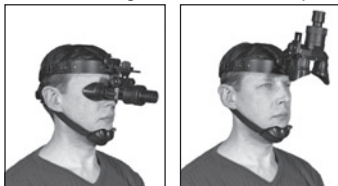


FIGURE 2-3. FLIP-UP HEAD MOUNT

### B. Goggles installation and adjustment

Now you are ready to mount the NV goggles onto the head mount.


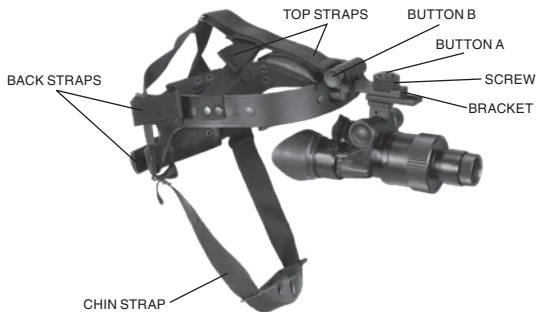


FIGURE 2-4. HEAD MOUNT OF NVG-7

1. Remove the already adjusted head mount from head.
2. Loosen the screw, push the button A and insert the bracket of the NVG-7 to the rail of the head mount.
3. Place the head mount with NV unit onto your head.
4. You might want to adjust the vertical position of goggles over your eyes and angle of tilt of looking axis. The straps of headgear can be readjusted for it. Then tighten the straps until the headgear fits firmly.
5. Move the unit along the rail for eye relief adjustment. Tighten the screw for fixing in position.

If you need to increase the eye relief of your goggles, you can displace the bracket on the top of NVG-7.

1. Unscrew the screw and detach the end-cap from the bracket of NVG-7.
2. Unscrew the 2 screws and detach the bracket from the NVG-7 body.
3. Turn the bracket 180 degrees.
4. Screw the 2 screws back into place.

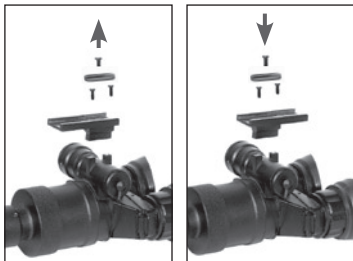

**FIGURE 2-5. MOUNTING OF THE BRACKET**

### **C. Flip-up Mechanism**

The head mount has a flip-up mechanism. Push the button B on the side of the mount and lift the unit up until the unit fixates in the top position. Push the same button to lower NV unit to viewing position.

## **NOTE**


Some of NVG-7 contain Flip-up Shutoff System. This system turns the unit off when the NVG is upright on the flip-up head mount. To turn the goggles back on, turn the switch button to ON again.

### **2.1.3. HELMET MOUNT INSTALLATION**

Helmet mount for attachment of ATN's NVG-7 to a standard PASGT helmet. Helmet mount fits securely onto helmet via a rugged strapping device and grooved hooks. With helmet mount, NVG-7 can be positioned directly in front of user's eyes or flipped.

#### **A. Installation**

1. Install the mount onto helmet as shown on the picture.
2. Tighten and fixate the straps.
3. Attach goggles to the rail. Push button A and insert the bracket of the NVG-7 to the rail of the mount.
4. Place the helmet on your head.

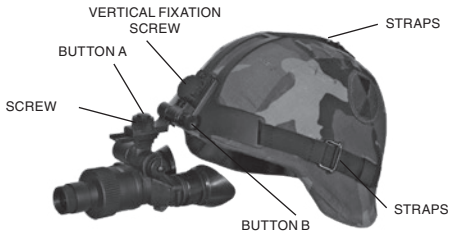

**FIGURE 2-6. HELMET MOUNT INSTALLATION AND ADJUSTMENT**

#### **B. Adjustment**

1. Loosen the screw and move the unit along the rail for eye relief adjustment. Tighten the screw.
2. Loosen the top vertical fixation screw. Adjust goggles vertical position. Tighten vertical position screw.
3. The NVG-7 helmet mount has a flip-up mechanism. Push a button on the side of mount and lift the unit up till fixation in the top position.

The helmet mount has an adjustment of angular position of device relatively of the look axis.

1. Loosen two screws on the front of flip-up mechanism.
2. Rotate device around axis of mechanism to the necessary position.
3. Tighten the two screws again.

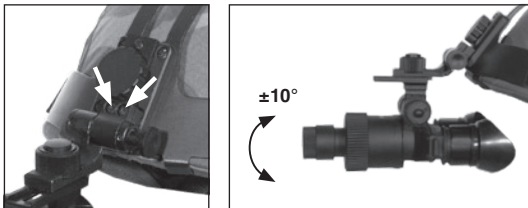


FIGURE 2-7. ADJUSTMENT OF ANGULAR POSITION

### 2.1.4. 3X LENS INSTALLATION

To install 3X Afocal Lens screw it into the thread of front lens of NVG-7.

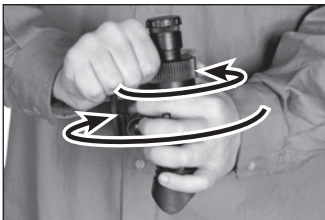


FIGURE 2-8. NVG-7 WITH 3X LENS

### 2.1.5. 5X LENS INSTALLATION

To install 5X lens unscrew the objective lens of NVG-7 from the body. Please note to hold the ridged edge of the lens with one hand and then grasp the neck of the unit with the other and twist in opposite directions as you on the Figure 2-9 . It is very important not to grasp

the eyepieces but grasp the neck of unit. To install lenses screw 5X lens to the free place (make sure that the unit is turned off).



**FIGURE 2-9. UNSCREWING OF OBJECTIVE LENS**




**FIGURE 2-10. NVG-7 WITH 5X LENS**

### **2.1.6. 8X LENS INSTALLATION**

To install 8X lens unscrew the objective lens of NVG-7 from the body. Please note to hold the ridged edge of the lens with one hand and then grasp the neck of the unit with the other and twist in opposite directions as you on the Figure 2-9 . It is very important not to grasp the eyepieces but grasp the neck of unit. To install lenses screw 8X lens to the free place (make sure that the unit is turned off).

NVG-7 with 8X lens has a capability to be used with a tripod.

1. Loosen two fixing screws of the ring.
2. Turn the ring until the socket is directed straight down.
3. Tighten the fixing screws.
4. Screw the tripod screw in to the tripod socket.

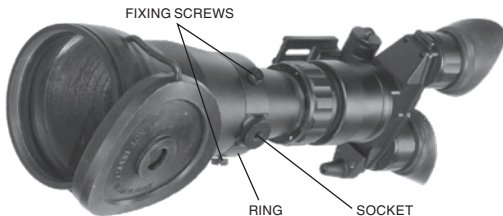

**FIGURE 2-11. NVG-7 WITH 8X LENS**

#### **NOTE**

Severe damage to the unit can occur if the tripod collapses or is knocked over. It is recommended that the NVG-7 be removed if the user is not within arm's reach of the tripod.




**FIGURE 2-12. NVG-7 WITH 8X LENS ON THE TRIPOD**

### **2.1.7. IR-450 INSTALLATION**

IR-450 can be mounted on the bracket of NVG-7.

1. Loosen the IR-450 fixing screw.


2. Insert rail of IR450 in the bracket of the NVG-7.
3. Tighten the fixing screw tightly.

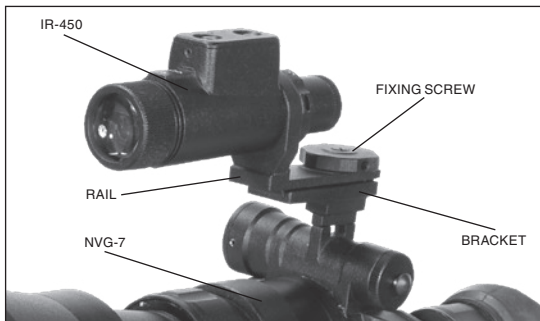

**FIGURE 2-13. IR450 INSTALLATION**

## **2.1.8. ADAPTER TO MIL-SPEC HEAD/HELMET MOUNT**

Adapter to Mil-spec head/helmet mount allows to attach the NVG-7 to the Mil-spec head/helmet mount.

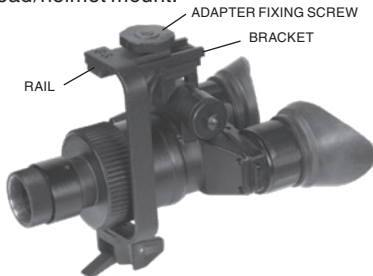

**FIGURE 2-14. ADAPTER TO MIL-SPEC HEAD/HELMET MOUNT INSTALLATION**

This adapter can be mounted on the bracket of NVG-7.

1. Loosen the adapter fixing screw.
2. Insert rail of the adapter in the bracket of the NVG-7.
3. Tighten the the adapter fixing screw.
4. Align the adapter and the head/helmet mount as shown on the Figure 2-12. Slide the goggles rearwards until the alignment boss aligns with the alignment groove on the head/helmet mount. Push until the goggles locks into the head/helmet mount.



**FIGURE 2-15. MOUNT OF NVG-7 WITH ADAPTER TO MIL-SPEC HEAD/HELMET MOUNT INSTALLATION**

## 2.2. OPERATING PROCEDURES

### 2.2.1. CONTROLS AND INDICATORS

The NVG7 is designed to adjust for different users and corrects for most differences. The controls of the goggles are shown on Figure 2-16. The functions of controls and indicators are described in the Table 2-2.

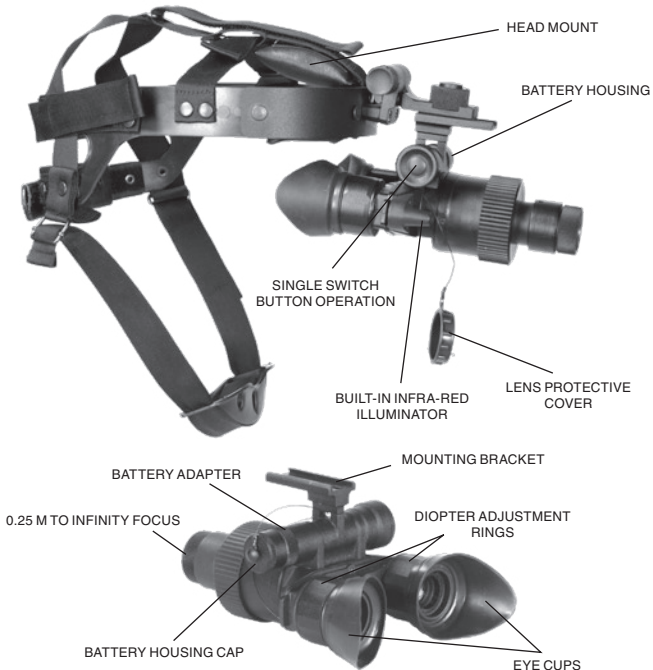


FIGURE 2-16. NVG-7 CONTROLS AND MAIN ELEMENTS

**TABLE 2-2. NVG-7 CONTROLS AND INDICATORS**

<b>CONTROLS</b>	<b>FUNCTION</b>
Diopter Adjustment	Focuses eyepiece lens without the need for glasses. Adjusts for sharper image of intensifier screen.
Objective Lens Focus	Focuses objective lens. Adjusts for sharpest image of viewed object.
Single Switch Button Operation	Controls Unit power and built-in IR Illuminator. To turn the unit on and off press the button ) Short press - less than 1.5 sec. To turn the built-in IR illuminator on, push button by long press (more than 1.5 sec.).
Indicator in FOV	When built-in IR illuminator is ON, the indicator in the FOV will lights red.
	When the battery is low the red indicator in the FOV starts blinking.

### **2.2.2. PREPARATION FOR OPERATION**

For checking the device in daytime conditions or in a light room:

1. Make sure the battery is installed as indicated on the NVG7 body.
2. Make sure the lens cap is attached to the front lens.
3. Turn on the device by short pressing button. After this you can start observing scene through the oculars. The greenish-lit screen of the image tube means that the device is working normally.
4. Direct the NVG-7 at an object located 15-25 yards/m from you and obtain a sharp image by turning eyepieces (see section 2.2.3).
5. Turn off the device by short pressing button again.

#### **CAUTION**

**Never use your night vision device in daylight areas without the lens cover on! Never direct the lens to the bright light!**

## 2.2.3. OPERATIONS IN THE DARK CONDITIONS

### **CAUTION**

**Bright sources such as light of fire, headlights, searchlights, etc. can damage the NVG-7. Avoid exposing the NVG-7 to these types light sources.**

For start the operations in dark conditions:

1. Make visual estimation of the illumination level in the viewing area is less than 1 lux (late twilight sky conditions).
2. Remove the front lens cap and place it over the lens housing.
4. Push the button. A green glow will appear in the eyepiece (after a slight delay).
5. Observe the scene and adjust focus.

## 2.2.4. FOCUSING

To focus the NVG-7, first you will need to adjust the diopter. Simply turn the diopter clockwise until it stops. Then, while looking through the diopter at an object, slowly turn the diopter back counter clockwise until the grain in the image is sharp.



**FIGURE 2-17. NVG-7 FOCUSING**

## **NOTE**

**We suggest that you focus the diopter during daylight with the filter on.**

Next focus the front lens until the image and the grain are both sharp. When you are in low-light conditions and the daylight filter is off, you may focus the front lens to receive sharp image, the diopter should not be adjusted.

## **NOTE**

**The front lens should be readjusted as you view objects at different distances.**

## **2.2.5. IR ILLUMINATOR OPERATION**

### **A. Built-in Infra-Red Illuminator**



**FIGURE 2-18. NVG-7 BUILT-IN INFRA-RED ILLUMINATOR**

Infra-red illuminators, or IR illuminators, are common to night vision. The IR light greatly enhances the performance of the NVG-7 while remaining almost totally invisible to the naked eye.

The NVG-7 goggles have a built in IR with indicator “ON” light within the FOV. To turn the IR on, push the button by long press (more than 1.5 sec.). It is important to remember that the IR illuminator is simply an infra red light source, and like any light source, it may lose its effectiveness over a great distance.

To turn the IR off, push the button again by long press (more than 1.5 sec.).


## **NOTE**

The IR will automatically turn off when the unit's power is turned off.

### **B. IR 450 Detachable Infra-Red Illuminator**

IR450 is powerful detachable infrared illuminator for long range night vision in the total darkness.

The ATN IR450 is powered with one CR123A lithium battery. To install the battery unscrew the cap of the battery housing and insert the battery following the polarity arrows marked on the housing. Put the cap in place.

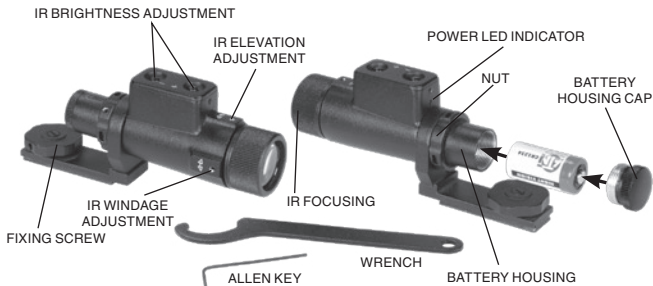


**FIGURE 2-19. IR450 ILLUMINATOR**

The IR-450 illuminator has a control panel with two buttons. To switch the IR illuminator on/off press “+” and “-” buttons simultaneously. When the IR illuminator is switched on you can see the green LED lit on the back side of IR450. By pushing the buttons “+” and “-” you may adjust the IR brightness.

The IR beam is focusable to change the field of coverage. To change the beam width slightly turn the IR lens.

You may need adjust the focusing of the IR beam to change the field of coverage. Do it by slightly rotating the IR lens. The windage and elevation screws help adjust the direction of the IR beam from the IR450 in order to focus on the scene observed in the viewfinder of your NVD. Use the included Allen wrench to rotate the adjusting screws until the IR beam is centered. Please remember the adjustments should be performed under night light conditions only.

You can change the position of the IR control panel to meet your your needs. The wrench that is included in the set, is used to loosen the nut located on the body of the IR. Rotate the IR to the desired position. Tighten the nut with the wrench to secure the new position.

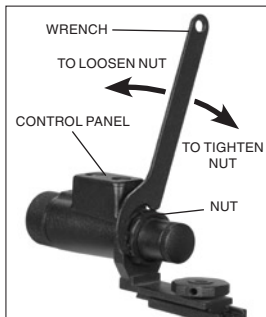

**FIGURE 2-20. CHANGING OF CONTROL PANEL POSITION**

### **2.2.6. SHUT-DOWN OPERATIONS**

1. Shot press button to turn the NVG-7 off. The green of the image intensifier tube glow will fade to black.
2. Replace the protective cap on the front lens.

## **SECTION III**


# **OPERATIONAL DEFECTS**

## **3.1. ZEROING OPERATIONAL DEFECTS**

Operational defects refer to the reliability of the image intensifiers and are an evidence of instability. Their identification shall be a valid reason to immediately refuse to accept the ATN NVG-7. These include shading, edge glow, flashing, flickering, and intermittent operation.

### **3.1.1. SHADING**

If shading is persistent, you will not see a fully circular image (Figure 3-1). Shading is very dark and you cannot see an image through it. Shading always begins on the edge and migrates inward eventually across the entire image area. Shading is a high contrast area with a distinct line of demarcation. Contact ATN or point of purchase for warranty/repair procedures.

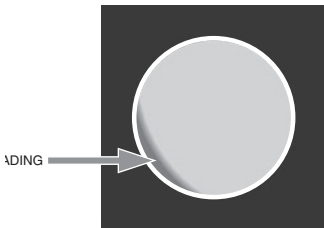

**FIGURE 3-1. SHADING**

#### **NOTE**

**Make sure the shading is not the result of improper exit pupil position.**

### 3.1.2. EDGE GLOW

Edge glow is a bright area (sometimes sparkling) in the outer portion of the viewing area (Figure 3-2). To check for edge glow, block out all light by cupping a hand over the lenses. If the image tubes are displaying edge glow the bright area will still show up. Contact ATN or point of purchase for warranty/repair procedures.

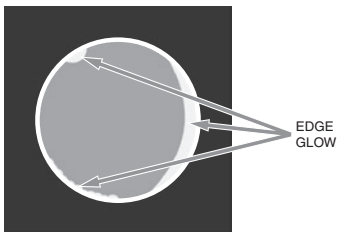


FIGURE 3-2. EDGE GLOW

### 3.1.3. FLASHING, FLICKERING, OR INTERMITTENT OPERATION

The image may appear to flicker or flash. If there is more than one flicker, check for loose battery adapter or weak battery. Contact ATN or point of purchase for warranty/repair procedures.

### 3.1.4. COSMETIC BLEMISHES

These are usually the result of manufacturing imperfections that do not affect image intensifiers reliability and are not normally a reason to claim for warranty or repair work. However, some types of blemishes can get worse over time and interfere with the usability of the device. If you believe a blemish is a cause for rejection, warranty or repair please ATN or point of purchase for warranty/repair procedures.

### A. Bright Spots.

A bright spot is a small, non-uniform, bright area that may flicker or appear constant (Figure 3-3).

Not all bright spots make the ATN NVG-7 rejectable. Cup your hand over the lenses to block out all light. If the bright spot remains, return the ATN NVG-7. Bright spots usually go away when the light is blocked out. Make sure any bright spot is not simply a bright area in the scene you are viewing. **Bright spots are acceptable if they do not interfere with the ability to view the outside scene.**

### B. Emission Points.

A steady or fluctuating pinpoint of bright light in the image area and does not go away when all light is blocked from the objective lenses of the bi-ocular (Figure 3-3). The position of an emission point within the image area does not move. Not all emission points make the ATN NVG-7 rejectable. Make sure any emission point is not simply a point light source in the scene you are viewing. **Emission points are acceptable if they do not interfere with the usability of the device.**

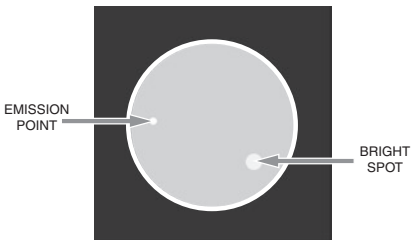


FIGURE 3-3. BRIGHT SPOTS AND EMISSION POINTS

### C. Black Spots.

These are cosmetic blemishes in the image intensifiers or dirt or debris between the lenses. Black spots are acceptable as long as they do not interfere with viewing the image. **No action is required if this condition is present unless the spots interfere with the usability of the device.**

### D. Fixed-Pattern Noise.

This is usually a cosmetic blemish characterized by a faint hexagonal (honeycomb) pattern throughout the viewing area that most often occurs at high light levels or when viewing very bright lights (Figure 3-4). This pattern can be seen in every image intensifier if the light level is high enough. **This condition is acceptable as long as the pattern does not interfere with viewing the image and usability of the device.**

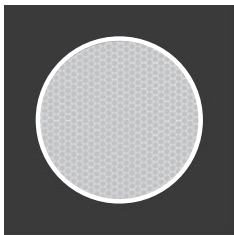


FIGURE 3-4. FIXED-PATTERN NOISE

### E. Chicken Wire.

An irregular pattern of dark thin lines in the field of view either throughout the image area or in parts of the image area (Figure 3-5). Under the worst-case condition, these lines will form hexagonal or square-wave shaped lines. This is typically viewed in high light conditions. **No action is required if this condition is present unless it interferes with the viewing the image and interferes with the users usability of the device.**



FIGURE 3-5. CHICKEN WIRE

## **SECTION IV**

# **MAINTENANCE INSTRUCTIONS**

## **4.1. PREVENTIVE MAINTENANCE CHECKS AND SERVICES (PMCS)**

---

### **4.1.1. PURPOSE OF PMCS**

PMCS is performed daily when in use to be sure that the NVG7 is ready at all times. Procedures listed in Table 4-1 are a systematic inspection of the NVG-7 that will enable you to discover defects that might cause the sight to fail on a mission.

### **4.1.2. FREQUENCY OF PERFORMING PMCS**

The frequency of performing PMCS is as follows:

1. Daily when the NVG-7 is in use.
2. When it is removed from the case for any reason.

**TABLE 4.1 PREVENTIVE MAINTENANCE CHECKS AND SERVICES FOR NVG7**

<b>SEQ. NO.</b>	<b>LOCATION ITEM TO CHECK/ SERVICE</b>	<b>PROCEDURE</b>	<b>NOT FUNCTIONING AT OPTIMAL LEVEL IF</b>
1	Maintenance	Open carrying case, inventory items. Previously recorded faults on maintenance records.	Not Current.  Fault not corrected.
<b>GOGGLES</b>			
2	Optical Surfaces	Inspect lenses for dirt, fingerprint residue, chips, or cracks. If necessary, clean and dry lens with water and lens tissue.	Scratches or chips hinder vision with goggles turned on, or if cracks are present.
3	External Surfaces	Inspect for cracks or damage. Scratches and gouges are OK if operation is not affected	Cracked or damaged.

SEQ. NO.	LOCATION ITEM TO CHECK/ SERVICE	PROCEDURE	NOT FUNCTIONING AT OPTIMAL LEVEL IF
4	Battery Adapter / Compartment	Check to make sure battery adapter is present. Remove battery adapter and inspect for corrosion, moisture, corroded or defective contacts.	Adapter is missing, contacts damaged or corroded.
5.	Diopter Adjustment Rings	Rotate diopter adjustment ring to make sure the eyepiece is not too tight or too loose.	Binding, not moving freely or too loose.
6	Eyecups	Inspect for dirt, dust, and cracked or torn cups. Inspect for bent, broken or improperly fitting eyecups. If necessary, clean with water.	
7	Objective Lens Focus Ring	Rotate objective lense focus rings to ensure free movement.	Binding or not moving freely.
8	Lens Cap	Inspect for cracked, torn, or missing lens cap.	
9	Viewed Image	Refer to Section V – Operation Defects – to inspect for operational defects.	Flickering, flashing, edge glow, or shading is observed.
10	Bracket	Inspect for dirt, dust, or corrosion. If necessary, clean socket with water.	
11	Carrying Case	Remove all items and shake out loose dirt or foreign material. Inspect for tears, cuts, excess wear or damage to mounting clips.	

## 4.2. TROUBLESHOOTING PROCEDURES

Table 4.2. lists common malfunctions that you may find in your equipment. Perform the tests, inspections, and corrective actions in the order they appear in the table.

This table cannot list all the malfunctions that may occur, all the tests and inspections needed to find the fault, or all the corrective actions needed to correct the fault. If the equipment malfunction is not listed or actions listed do not correct the fault, notify ATN or your point of Purchase.

**TABLE 4.2 TROUBLESHOOTING PROCEDURES FOR NVG-7**

<b>SEQ. NO.</b>	<b>MALFUNCTION</b>	<b>TEST OR INSPECTION</b>	<b>CORRECTIVE ACTION</b>
1	Goggles fail to activate.	Press button.  Check for defective, missing or improperly installed batteries.	Press button again. Replace the battery or install it in a proper way.
2	Poor image quality	Check objective lenses or eyepieces focus. Check for fogging or dirt on lenses.	Refocus.  Clean lenses surface. If image quality is still poor, refer to higher level of maintenance.
3	Light visible around eyecups	Check eye-relief distance. Check eyecups for resiliency.	Readjust for proper eye-relief distance. If eyecups are defective, refer to higher level of maintenance.
4	Diopter adjustment cannot be made	Check to see if the diopter adjustment rings are bent or broken	If damaged, refer to higher level of maintenance.

<b>SEQ. NO.</b>	<b>MALFUNCTION</b>	<b>TEST OR INSPECTION</b>	<b>CORRECTIVE ACTION</b>
5	Battery adapter difficult to remove.	Check for damaged battery adapter.	If damaged, refer to higher level of maintenance.
6	IR illuminator fails to activate.	In a dark location with system turned on, activate IR. Visually check IR illuminator operation; scene should brighten.	If IR illuminator fails to activate, refer to higher level of maintenance.
7	IR indicator fails to activate.	Visual.	Refer to higher level of maintenance.

## **4.3. MAINTENANCE PROCEDURES**

---

### **4.3.1. NVG-7 MAINTENANCE**

The NVG-7 maintenance consists of external inspection of its components for serviceability, cleaning and installation of the standard and optional accessories. Maintenance instructions covered elsewhere in this manual (PMCS, troubleshooting, etc.) are not repeated in this section.

#### **CAUTION**

**The NVG-7 is a precision electron-optical instrument and must be handled carefully at all times to prevent damage.**

### **4.3.2. CLEANING PROCEDURES**

1. Gently brush off any dirt from the goggles body using only a clean soft cloth.
2. Moisten the cloth with fresh water and gently wipe the external surfaces (except lenses).
3. Dry any wet surfaces (except lenses) with another dry and clean soft cloth.
4. Using lens brush, carefully remove all loose dirt from the lenses.
5. Slightly dampen a cotton swab with ethanol and lightly and slowly wipe the lenses. Clean the glass surfaces by circular movements from the centre to the edge, not touching the lens holder and changing cotton swab after each circular stroke. Repeat this step until the glass surfaces are clean.

#### **CAUTION**

**Dry thoroughly each item before replacing into the storage case.**

## 4.4. HEAD MOUNT MAINTENANCE

---

### 4.4.1. REMOVAL AND INSTALLATION OF BROWPAD

1. Remove old browpad (Figure 4-1) by grasping the headband.
2. Replace the browpad by gently pressing on the new browpad and smoothing out any wrinkles in new browpad.



FIGURE 4-1. REMOVAL AND INSTALLATION OF BROWPAD

### 4.4.2. REMOVAL AND INSTALLATION OF CHINSTRAP

1. Remove the chinstrap (Figure 4-2) by unsnapping the Velcro tape from the left side of the headband. Unbuckle the chinstraps from narrow strap assembly.

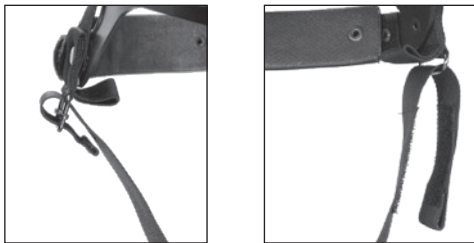


FIGURE 4-2. REMOVAL AND INSTALLATION OF CHINSTRAP

2. Replace the chinstrap by using the Velcro tape on the left side of the headband. Lace the right straps into their respective sliding bar buckles on the right side of the headband for correct lacing (Figure 4-2).

#### **4.4.3. REMOVAL AND INSTALLATION OF CHIN CUP**

1. Remove the chinstrap (Figure 4-3) by unsnapping the Velcro tape from the left side of the headband.
2. Replace the chin cup by sliding the cap on the chinstrap. Fix the Velcro tape onto the place.



**FIGURE 4-3. REMOVAL AND INSTALLATION OF CHIN CUP**

#### **4.4.4. PREPARING FOR EXTENDED STORAGE**

To prepare the NVG-7 for extended storage, perform the following:

1. Check the goggles for serviceability as outlined in item 4.1 of this manual.
2. Remove the batteries.
3. Clean the goggles and accessories.
4. Replace all items in the case.

# APPENDIX A

(Reference)

## ESTIMATION OF AMBIENT ILLUMINATION LEVEL

TABLE A-1. STANDARD NATURAL LIGHT CONDITIONS AND  
ILLUMINATION VALUES

STANDARD NATURAL LIGHT CONDITIONS	ILLUMINATION VALUE, LUX
Quarter moon	0.05
Full moon	0.30
Late twilight sky	1.00
Twilight sky	10.00
Overcast sky in the daytime	500.00

# APPENDIX B

## SPARE PARTS LIST

The Spare Parts List is an illustrated catalog of main parts and assemblies completing the Night Vision Goggles NVG7, here in after referred to as NVG7.

Therefore, in case of failure of any part or assembly User could replace it by ordering the corresponding part/assembly from the Spare Parts List. The amount and assortment of the spare parts needed should be arranged with each contract individually.

**TABLE B-1. ATN NVG7 SPARE PARTS LIST**

<b>PART NO.</b>	<b>DESCRIPTION</b>	<b>FIG.</b>	<b>ITEM</b>
<b>AT 201211.700</b>	<b>Night Vision Goggles</b>	<b>B1</b>	
AT 301355.701	Battery Cap and Lens Cap Assembly	B1	1
AT 201371.709	1x Lens	B1	2
AT 203.129.750	Bracket	B1	3
AT 8.647.003	Eye Cup	B1	4
AT 204301.701	Battery Adapter	B1	5
AT 203.029.701	Body	B1	6
CR123A	CR123A Battery	B1	7
<b>AT 201212.700</b>	<b>Accessories 1 (From the Kit)</b>	<b>B2</b>	
AT 301542.702	Head Mount	B2	1
AT 293129.709	Carrying Case	B2	2
AT 293130.799	Operators Manual	B2	3
<b>AT 201213.700</b>	<b>Accessories 2 (Optional)</b>	<b>B3</b>	
AT 302377.003	IR450 Kit	B3	1
AT 202371.705	3X Lens	B3	2
AT 202571.706	5X Lens	B3	3
AT 202571.806	8X Lens	B3	4
AT 202571.555	NVB5X Kit	B3	5
AT 202571.888	NVB8X Kit	B3	6

**TABLE B-1. ATN NVG7 SPARE PARTS LIST**

<b>PART NO.</b>	<b>DESCRIPTION</b>	<b>FIG.</b>	<b>ITEM</b>
AT 301524.801	Helmet Mount	B3	7
AT 302301.001	Adapter to Mil-spec Head/Helmet Mount	B3	8
AT 302301.002	MICH Helmet Mount Kit	B3	9
AT 302301.003	PAGST Helmet Mount Kit	B3	10



**FIGURE B-1. NIGHT VISION GOGGLES**



**FIGURE B-2. ACCESSORIES 1 (FROM THE KIT)**



**FIGURE B-3. ACCESSORIES 2 (OPTIONAL)**

## APPENDIX C

### REMOVAL AND INSTALLATION OF IMAGE INTENSIFIER

The image intensifier can be removed and installed without performing any disassembly of the housing. It requires only removing the objective lens. The airtight seal will be broken and the final assembly must be nitrogen purged to eliminate moisture within the goggles.

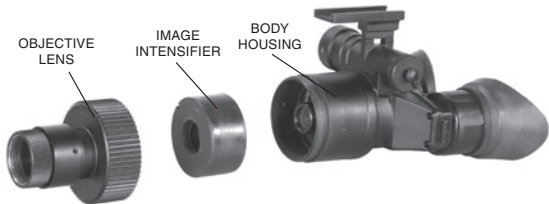


FIGURE C-1. IMAGE INTENSIFIER REMOVAL AND INSTALLATION

#### C-1. INITIAL SETUP

##### Test Facility

Clean station in the electronic repair service area.

##### Materials/Parts

1. Image intensifier.
2. Cotton-tipped applicators.
3. Isopropyl alcohol.

##### WARNING

##### Toxic Material

The image intensifier's phosphor screen contains toxic materials. If an image intensifier breaks, be extremely careful to avoid inhaling the phosphor screen material. Do not allow the material to come in contact with the mouth or open wounds on the skin.

If the phosphor screen material contacts your skin, wash it off immediately with soap and water.

If you inhale/swallow any phosphor screen material, drink a lot of water, induce vomiting, and seek medical attention as soon as possible.

### **NOTE**

Confirm the image intensifier is out of the warranty period before replacing the image intensifier. If in the warranty period. If not in the warranty period.

## **C-2. REMOVAL**

1. Remove objective lens.

### **CAUTION**

Handle image intensifier gently to prevent damage. Set image intensifier only on the contact end. Treat suspected defective image intensifiers as though they are good so they are not damaged when returned to Defense Reutilization and Marketing Office (DRMO).

2. Gently ease out image intensifier from within wired body housing. Pull out straight forward from housing.
3. If image intensifier is not defective, wrap in lens paper to protect and store in a clean dry place.

## **C-3. INSTALLATION**

1. If the image intensifier is defective, replace it with a new image intensifier.

### **CAUTION**

Use care when opening shipping container to prevent damage. Treat defective image intensifier carefully so it can be returned to DRMO undamaged.  
Do not force the image intensifier into the wired housing.

### **NOTE**

Retain packaging material for use when returning defective image intensifiers to DRMO.

2. Clean both ends of image intensifier with cotton-tipped applicators and isopropyl alcohol.
3. Slide the image intensifier, contacts end first, into the opening of the wired housing so the groove on the side of the image intensifier engages the ridge inside the opening of the wired housing.
4. Install the objective lens.

## FOR TECHNICAL INFORMATION

### **ATN CORP.**

1341 San Mateo Avenue  
South San Francisco, CA 94080

(800) 910-2862

(650) 989-5100 tel.

(650) 875-0129 fax

[www.atncorp.com](http://www.atncorp.com)

[info@atncorp.com](mailto:info@atncorp.com)

06052011



For customer service and technical support, please contact  
**American Technologies Network Corp.**

**North American Office**

1341 San Mateo Avenue, South San Francisco, CA 94080  
phone: 800-910-2862, 650-989-5100; fax: 650-875-0129

**European Office**

The following countries can use our toll free number:

**00 800 9102-8620**

Austria, France, Germany, Holland, Italy, Spain, Sweden, Switzerland

For other countries, please use

**38 048-7770214 or 38 048-7770345**

**[www.atncorp.com](http://www.atncorp.com)**