

NIGHT VISION RIFLESCOPE

Aries 330 "Warrior"




u s e r ` s g u i d e

Important Export Restrictions! Commodities, products, technologies and services contained in this manual are subject to one or more of the export control laws and regulations of the U.S. Government and they fall under the control jurisdiction of either the US Department of State or the US BIS-Department of Commerce. It is unlawful and strictly prohibited to export, or attempt to export or otherwise transfer or sell any hardware or technical data or furnish any service to any foreign person, whether abroad or in the United States, for which a license or written approval of the U.S. Government is required, without first obtaining the required license or written approval from the Department of the U.S. Government having jurisdiction. Diversion contrary to U.S. law is prohibited.



**AMERICAN
TECHNOLOGIES
NETWORK
CORP.**

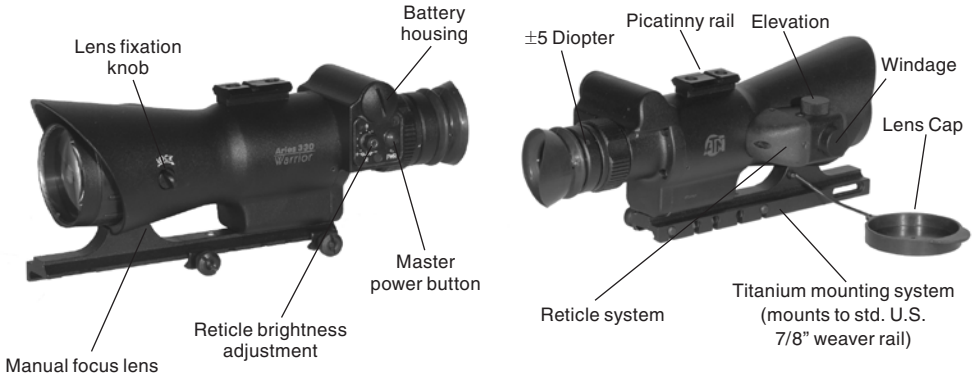

FEATURES

- 3x magnification with F1:1.7, f90 mm lens
- “Green on Green” reticle system
- Detachable most powerful in the industry 450mW Infrared Illuminator
- Titanium mounting system
- Picatinny rail for additional equipment mounting
- Reticle brightness adjustment

SPECIFICATIONS

| | |
|-----------------------------|---------------------|
| Generation | 1st |
| Magnification..... | 3X |
| Lens system | F1:1.7, F90mm |
| FOV | 12 deg. |
| Range of focus | 1m to infinity |
| Reticle | Green On Green |
| Windage & elevation | 1 MOA |
| Battery life..... | 10-20 hours |
| Dimensions | 10.6” x 3.9” x 3.9” |
| Weight | 1kg/2.5 lbs |
| Diopter adjustment | +/-5 |
| Operating Temperature | -40°C to +50°C |
| Storage Temperature | -50°C to +70°C |

* ATN reserves the right to change the above specifications at any time without notice

CAUTION:

THIS PRODUCT CONTAINS NATURAL RUBBER LATEX WHICH MAY CAUSE ALLERGIC REACTIONS.

The information in this manual furnished for information use only, is subject to change without notice, is not to be construed as a commitment by ATN Corp.

ATN Corp. assumes no responsibility or liability for any errors or inaccuracies that may appear in this book.

©2008 ATN Corp. All right reserved.

APPLICATION

The **Aries 330 “Warrior”** is an affordable, high quality 1st Generation weapon sight. It sports features such as a new super fast front lens system for optimal brightness, easy one-button operation and a reticle brightness adjustment. The Warrior also comes with our new detachable, most powerful in the industry 450mW Infra-red Illuminator with dedicated windage and elevation adjustments. This new IR lets you see even in total darkness up to 150 yards away!

Combine this accuracy with other features such as a new super fast front lens system for optimal brightness, easy one-button operation, reticle brightness adjustment and our new detachable, most powerful in the industry 450mW Infrared Illuminator with dedicated windage and elevation adjustments.

PREPARATION FOR OPERATION

Before getting started make sure to follow these steps:


- Install the battery into its housing with the polarity order shown on the main body of the unit.
- Switch on the Aries scope with the protective lens cover still attached to the lens.
- Make sure that the green luminance of the light intensifier tube is present.
- Observe the scene, and adjust the diopter and/or lens for optimal image clarity.
- You may now enter a dark environment or simply shut the lights off in order to darken the room.
- Next, remove the lens cap/daylight filter.
- Observe the scene, and adjust the front lens for ideal focus.
- Finally, you may need to turn the infra-red (IR) illuminator on. Notice the ability of the Aries scope to see in total darkness with help of IR illuminator.



OPERATING


MOUNTING

1. Slightly loosen the horizontal and vertical fixing screws on the 7/8” weaver rail built into the scope.
2. Place the scope on the dovetail mount of the fire arm making sure that the mount aligns with the receptor attachment screw groove. Adjust as necessary.
3. Tighten the horizontal fixing screws.

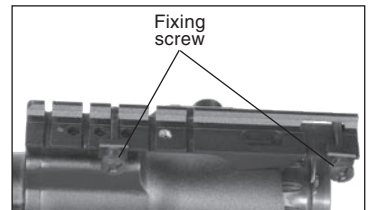


NOTE: Receptor attachment screws may need to be tightened after continuous shooting.

RETICLE BRIGHTNESS ADJUSTMENT

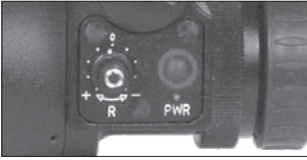

By rotating the knob you may adjust the reticle's brightness. Adjustment could be easily seen if you look through the scope while adjustment.

FOCUSING

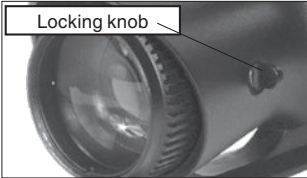

To focus your riflescope you will need to adjust the diopter first. Simply turn the diopter clockwise until it stops. Then, while looking through the diopter at an object, slowly turn the diopter back counter clockwise until the grain on the image becomes sharp.

NOTE: We suggest that you focus the diopter during daylight with the filter on.

Next, focus the front lens until the image and the grain become both sharp. When you are in the low-light conditions and the daylight filter is off you may focus the front lens to receive a sharp image, the diopter should not be adjusted.

NOTE: The front lens should be readjusted as you view objects at different distances.

Before focusing turn the lens fixation handle clockwise to unlock the lens focusing system.


When you finish focusing of the front lens, you should lock the front lens by turning the lens fixation knob clockwise. Failure to do this may cause shift in aiming point during shooting.

450 MW IR ILLUMINATOR

Infra-red (IR) Illuminators are common for night vision technology. The IR light enhances greatly the performance of your Aries scope, while remaining almost invisible to a naked eye.

It is important to remember that the IR illuminator is simply an infra red light source, and like any light source it may lose its effectiveness over a great distance.

The 450 mW IR Illuminator is powered by a separate from the main unit battery. To install the battery unscrew the cap and insert a battery the way shown at the diagram on the IR. To attach the 450mW IR Illuminator to the scope install IR onto the Picatinny rail and fixate the clamp.

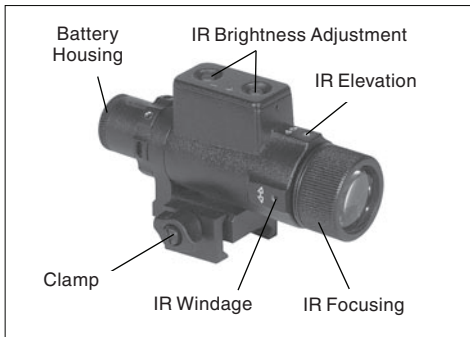

The IR illuminator control buttons are located on its side. To switch the Digital IR illuminator on/off press “+” and “-” buttons simultaneously. When the IR illuminator is switched on you can see the green LED lit. By pushing the buttons “+” and “-” you may adjust the IR brightness.


The IR beam is focusable to change the field of coverage. To change the beam width slightly turn the IR lens.

You could change the IR control panel fitting your needs. The screw-tool included into the set should be used for weakening the fixing screw located on the IR. Rotate the IR placing it at the most convenient position. Tighten the screw with the screw-tool to fix the new position.

RANGEFINDER RETICLE

A 6' target fits between the numbered baseline and the main horizontal line. If the 6' target fits between the 2 and the right horizontal post of the main line the target is 200 yards away. If the same target fits between the 5 and the right post of main line the target is 500 yards away. The same is with the 1, 3 and 4.

The target would be either 100, 300 and 400 yards away. The vertical lines in chevron reticle are proportioned to help in rangefinding and in making allowances for wind or movement.

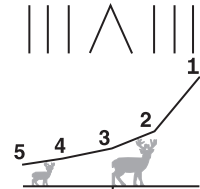


If a 6' target fits between these two lines then the target is 500 yards away.

If a 6' target fits between these two lines then the target is 200 yards away.

WINDAGE AND ELEVATION

The vertical and horizontal adjustments for the Aries can be achieved by turning the elevation and windage adjustment mechanisms (remove dust caps first). Each click equals to 1/2 inch at 100 yards for the Aries 350 and 1/4 inch for the Aries 330. When reaching the end of rotation do not use force.

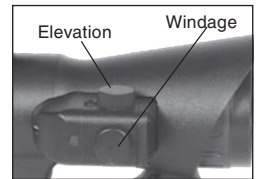

CLEANING THE EYEPIECE

You may need to clean the eyepiece of the riflescope from time to time in order to guarantee top performance. When you receive your riflescope you should check for dust on the eyepiece of the unit.

First you will need to remove the eyepiece. To do that you will initially need to loosen the 2 set screws that can be found on the base. Then unscrew the eyepiece counter-clockwise to remove it.

NOTE: You do not have to remove the set screws completely, they are very small and easy to misplace.

CAUTION: Use only Photographic lens cleaning tissue on these surfaces. Be careful not to scratch or smudge any of these surfaces. When using compressed air to blow dust away, make sure to avoid inverting the can while spraying. This can cause frozen propellant to exit the can, which can cause serious problems with the glass and phosphor screen.

WARNINGS AND CAUTIONS

- Always remember to turn off the Aries scope when it is not in use. If you do not plan on using your Aries scope for a period of more than 10 days, you should remove the batteries.
- Keep lens cap/daylight filter on when not in use.
- Avoid contact with dust, steam, and gas.
- The Aries scope are not harmful to the user or the environment.
- Do not disassemble except to clean the front lens and the eyepiece: **it will void your warranty.**
- Evaluate the scopes function by looking through it in a lit environment with the daylight filter lens cap on. Never use in daylight without the daylight filter lens cap on. Do not surpass ten minutes of testing.
- Never point the Aries scope at a bright light source. If the scope shuts off automatically after directing it at a bright light source, turn the unit off and wait 1 - 2 minutes before turning the unit back on.
- Adverse atmospheric conditions such as fog, smog, or haze and a lack of ambient light (moon or starlight) may diminish the effective viewing distance. All technical data for this unit was compiled in a controlled environment.
- If you use the rubber eyecaps for a long period of time, you may suffer skin inflammation. If you develop any symptoms, consult a doctor immediately.

TROUBLESHOOTING

- Q:** Flashes, flickers, or clicking occur while operating
- S:** If it occurs within the first five minutes of inserting new batteries, it is normal and the device will resume normal operation soon thereafter. If it occurs for more than 10 minutes, contact your dealer or other authorized service representative for service instructions.
- Q:** Dark spots on screen.
- S:** This may be dust on the lens, please clean according to instructions. They may also be Cosmetic blemishes in the intensifier tube which are a by-product of the manufacturing process. This is normal and will not affect the life or performance of the unit.
- Q:** Image not clear.
- S:** Adjust focus ring. If problem persists, increase viewing distance
- Q:** Fixed-pattern noise in a honeycomb shape.
- S:** Usually a cosmetic blemish characterized by a faint honeycomb-type pattern. This usually occurs when viewing very bright lights. Simply reduce the brightness.
- Q:** A pattern of dark thin lines which look like chicken wire.
- S:** Turn on illuminator, if purchased. If illuminator doesn't brighten image, replace batteries. If problem persists, contact ATN for service instructions.

2 YEAR PRODUCT WARRANTY

This product is guaranteed to be free from manufacturing defects in material and workmanship under normal use for a period of 2 (two) years from the date of purchase. In the event a defect that is covered by the foregoing warranty occurs during the applicable period stated above, ATN, at its option, will either repair or replace the product, and such action on the part of ATN shall be the full extent of ATN's liability, and the Customer's sole and exclusive remedy. This warranty does not cover a product (a) used in other than its normal and customary manner; (b) subjected to misuse; (c) subjected to alterations, modifications or repairs by the Customer of by any party other than ATN without prior written consent of ATN; (d) special order or "close-out" merchandise or merchandise sold "as-is" by either ATN or the ATN dealer; or (e) merchandise that has been discontinued by the manufacturer and either parts or replacement units are not available due to reasons beyond the control of ATN. ATN shall not be responsible for any defects or damage that in ATN's opinion is a result from the mishandling, abuse, misuse, improper storage or improper operation, including use in conjunction with equipment which is electrically or mechanically incompatible with or of inferior quality to the product, as well as failure to maintain the environmental conditions specified by the manufacturer. **CUSTOMER IS HEREBY NOTIFIED THAT OPERATION OF THE EQUIPMENT DURING DAYLIGHT HOURS OR UNDER ANY EXCESSIVE LIGHT CONDITIONS MAY PERMANENTLY DAMAGE THE INTERNAL COMPONENTS OF THE UNIT AND SAID DAMAGE WILL NOT BE COVERED UNDER THIS WARRANTY.** This warranty is extended only to the original purchaser. Any breach of this warranty shall be waived unless the customer notifies ATN at the address noted below within the applicable warranty period.

The customer understands and agrees that except for the foregoing warranty, no other warranties written or oral, statutory, expressed or implied, including any implied warranty of merchantability or fitness for a particular purpose, shall apply to the product. All such implied warranties are hereby and expressly disclaimed.

LIMITATION OF LIABILITY

ATN will not be liable for any claims, actions, suits, proceedings, costs, expenses, damages or liabilities arising out of the use of this product. Operation and use of the product are the sole responsibility of the Customer. ATN's sole undertaking is limited to providing the products and services outlined herein in accordance with the terms and conditions of this Agreement. The provision of products sold and services performed by ATN to the Customer shall not be interpreted, construed, or regarded, either expressly or implied, as being for the benefit of or creating any obligation toward any third party of legal entity outside ATN and the Customer; ATN's obligations under this Agreement extend solely to the Customer. **ATN's liability hereunder for damages, regardless of the form or action, shall not exceed the fees or other charges paid to ATN by the customer or customer's dealer. ATN shall not, in any event, be liable for special, indirect, incidental, or consequential damages, including, but not limited to, lost income, lost revenue, or lost profit, whether such damages were foreseeable or not at the time of purchase, and whether or not such damages arise out of a breach of warranty, a breach of agreement, negligence, strict liability or any other theory of liability.**

PRODUCT WARRANTY REGISTRATION

In order to validate the warranty on your product, ATN must receive a completed Product Warranty Registration Card for each unit or complete warranty registration on our website at www.atncorp.com. Please complete the included form and immediately mail it to our Service Center: ATN Corporation, 1341 San Mateo Avenue, South San Francisco, CA 94080.

OBTAINING WARRANTY SERVICE

To obtain warranty service on your unit, please contact our Customer Service department and request an RMA number. Once you have received your RMA # please mark this # on the outside of the shipping box and take or send the product, postage paid, with a copy of your sales receipt to our service center, ATN Corporation at the address noted above. All merchandise must be fully insured with the correct postage; ATN will not be responsible for improper postage or missing or damaged merchandise during shipment. Packages that do not have an RMA # clearly marked on the outside of the package will be delayed in being processed.



For customer service and technical support, please contact
American Technologies Network Corp.

North American Office

1341 San Mateo Avenue, South San Francisco, CA 94080

phone: 800-910-2862, 650-989-5100; fax: 650-875-0129

European Office

phone: 44(0)870-0111286, fax: 44(0) 845-3349142

The following countries can use our
toll free number 00 800 9102-8620

Austria, France, Germany, Holland, Italy, Spain, Sweden, Switzerland

www.atncorp.com